

1.General Descriptions

XR1182D is a CMOS digital clinical thermometer IC for measuring body temperature in Centigrade() or Fahrenheit() mode by its bonding option or by switch option. It also provides alarm and auto power off functions. The other electronic components are LCD display, thermistor,1.5V battery, ON/OFF switch, buzzer, resistors and capacitors.

2.Features

Single 1.5V battery operation.

Single-chip CMOS construction.

Centigrade or Fahrenheit measurement can be selected by bonding option or switch

Measurement range:

```
While XR1182D-1 / XR1182DS-2/XR1182D-4, +32.0 +41.9 (+90 +107.9 )
While XR1182D-3, +32.0 +43.9 (+90 +111.9 )
Resolution: 0.1 (0.1 ).
```

Measurement accuracy: 0.1 (0.2).

One-key input switch for power ON/OFF.


Highest temperature held.

Auto power off after 8 min 40 sec (XR1182D-1) or 10 min (XR1182D-2/-3/-4).

Display the last measured temperature.



3. Function Block Diagram

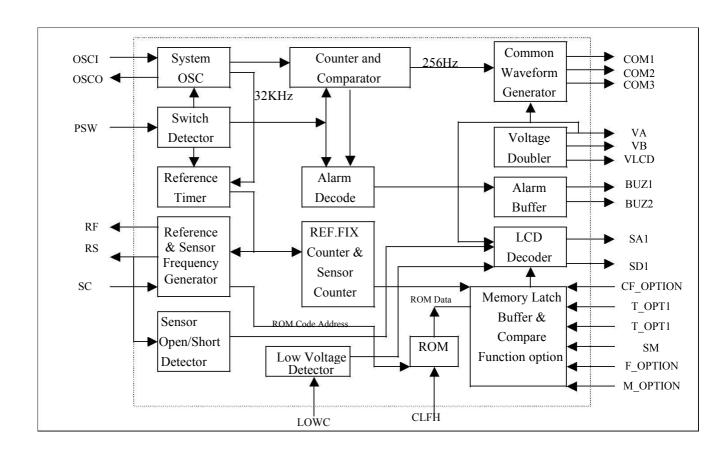

4.Function Descriptions

4.1 While XR1182D -1

<1> PSW: Push switch to power on or power off.

<2> when power on:

- A. The LCD display $188.8^{\text{T}}_{\text{M}}$ (or $188.8^{\text{T}}_{\text{M}}$) about 2 sec.
- B. After A, show the temperature of last measured about 2 sec.
- C. After B, Show L (or) about 1 sec.
- D. After C, when it is measuring. The (or) will flash at the speed of 1 Hz.
- E. If the temperature 32.0 (90), then display L ().
- F. If the temperature or= 42.0 (108), then display H ().
- G. When measuring, the LCD will always display the highest temperature.
- H. If the first measured temperature doesn't rise again, the measurement will not be over and it will auto power off in 3 minutes; Or from the



second time's measurement, if the temperature is not changed more than 4 or 8 or 16 seconds, the measurement is over and mark () stop flashing.

I. When measurement is over, if the temperature 37.4 (99.4), the buzzer alarms "Bi-Bi-Bi Bi-Bi-Bi " for 4 sec, as follows:

Bi Bi Bi

0.125S 0.125S 0.125S 0.125S 0.125S 0.375S

If the temperature 37.4 (99.4), the buzzer alarms

"Bi-Bi-Bi-" for 4 sec, as follows:

Bi

0.5S 0.5S

- J. It will auto power off when measurement is over than 8 minutes 40 seconds.
- K. When measurement is over, if the temperature rises within 8 minutes 40 seconds, then remeasure the temperature, but the () mark will not flash again. When remeasurement is over, the buzzer will not alarm again.
- <3> When push switch, buzzer will alarm "Bi" about 0.125 sec.
- <4> When power off: the stand-by current 0.5uA.
- <5> The frequence of the buzzer is 5.3khz.
- <6> After <2>-C, if detect low voltage(1.35 0.05 V):

The battery mark " I glashes at the speed of 1Hz and the measurement maybe not accurate, which means thermometer's battery must be changed.

- <7> When TEST2 pin is floating, the LCD displays the highest value, not the real time value, in order to adjust the reference resistance R3 during the process of producing. When connected to VDD, the LCD displays the real time value.
- <8> / (CLFH Pad) function is used by bonding option.

	CONNECTED TO VSS	NO CONNECT
CLFH		

<9> Thermometer others charter is as follows:

Temperature range	32.0 ~41.9	90 ~ 107.9		
Accuracy	0.1	0.2		
Resolution	0.1	0.1		

4.2 While XR1182D-2



<1>PSW: Push switch to power on or power off. <2> When power on: A. The LCD display 100.0 4 (When (T_OPT1=NC) or 100.0 M When (T OPT1=0) about 2 sec. B. After A, show the temperature of the last measured (and "M" When T OPT1=0) about 2 sec. C. After B, Show L (or) about 1 sec. D. After C, when it is measuring. The) will flash at the speed of 1 (or Hz. E. If the temperature 32.0 (90), then display L (). F. If the temperature or = 42.0(108)), then display H (). G. When measuring, the LCD will always display the highest temperature. H. If the measured temperature is not changed more than 16 sec, the measurement is over and mark () stop flashing.), the I. When measurement is over, if the temperature 37.4 (99.3 buzzer alarms "Bi-Bi-Bi Bi-Bi-Bi " for 4 sec, as follows: Ri Ri Ri 0.1258 0.1258 0.1258 0.1258 0.1258 0.375SIf the temperature 37.5 (99.5), the buzzer alarms "Bi-Bi-Bi-" for 4 sec, as follows: Ri 0.5S0.5SJ. It will auto power off when measurement is over than 10 minutes. L. When measurement is over, if the temperature rises within 10 min, the () mark will flash again (repeat from the step of < 2>-D). <3> When push switch, buzzer will alarm "Bi" about 0.165 sec. <4> When power off: the stand-by current 0.5 uA. <5>The frequence of the buzzer is 5.3khz, <6> After <2>-C, if detect low voltage(1.35 0.05 V): A: When T_OPT1=NC: " flashes at the speed of 1Hz and the The battery mark " measurement maybe not accurate, means thermometer's battery must be changed. B: When T OPT1=0:



The LCD display flashes at the speed of 1Hz and the measurement

maybe not accurate, means thermometer's battery must be changed. <7> When TEST2 pin is floating, the LCD displays the highest value, not the real time value, in order to adjust the reference resistance RF during the process of producing. When connected to VDD, the LCD displays the real time value.

<8> / (CLFH Pad) function is used by pad option.

	CONNECTED TO VSS	NO CONNECT
CLFH		

<9> Thermometer's other charter is as follows:

Temperature range	32.0 ~41.9	90 ~ 107.9		
Accuracy	0.1	0.2		
Resolution	0.1	0.1		

4.3 While XR1182D-3

<1> Power SW: Push switch to power on or power off.

<2> when power on:

A.	The LCD display (or (or) about 2 sec. If non-memory
	function the "M" will not display.

B. After A, with memory function push switch more than 2 sec, LCD will display the stable-temperature of last measure, and "M" will display.

2000 YOUR

- C. After B, LCD displays 36.5 (97.7) about 1 sec.
- D. After C, when it is measuring. The (or) will flash at the speed of 1HZ.
- E. With memory function, the stable-temperature time will be counted after releasing switch for 8 sec. Without memory function, the stable-temperature time will be counted after turning on for 8 sec.
- F. If the temperature 32.0 (90), then display L ().
- G. If the temperature or =44.0 (112), then display H ()
- H. When measuring, the LCD will always display the highest temperature.
- I. If the measured temperature is not changed more than 16 or 32 sec, the measurement is over and the mark () stops flashing.
- J. When measurement is over, if the temperature 37.5 (99.5),

 The buzzer alarms "Bi-Bi-Bi Bi-Bi-Bi " for 4 sec, as follows:

 Bi Bi Bi



0.1258 0.1258 0.1258 0.1258 0.1258

0.3758

If the temperature 37.5 (99.5), the buzzer alarms "Bi-Bi-Bi-Bi-" for 4 sec, as follows:

Bi

0.5S 0.5S

- K. It will auto power off when measurement is over than 10 minutes.
- L. When measurement is over, if the temperature rises within 10 minutes, then remeasure the temperature, but the () mark will not flash again. When remeasurement is over, the buzzer will not alarm again.
 - <3> When push switch, buzzer will alarm "Bi" about 0.125 sec.
 - <4> When power off: the stand-by current 0.5 uA.
 - <5> The frequence of the buzzer is 5.3khz.
- <6> After <2>-C, if detect low voltage (1.35 0.05 V), the LCD will only display battery mark"

 "and the measurement maybe not accurate, means thermometer must be changed battery.
- <7> When sensor circuit detect error, LCD only display "E", it will not measure normally until the error status is cancelled.
- <8> When TEST2 pin is floating, the LCD displays the highest value, not the real time value, in order to adjust the reference resistance RF during the process of producing. When connected to VDD, the LCD displays the real time value.

<9> Memory (SM Pad) and / (CLFH Pad) function is used by pad option.

	CONNECTED TO VSS	NO CONNECT		
CLFH				
SM	NO MEMORY FUNCTION	MEMORY FUNCTION		

<10> THERMOMETER'S OTHER CHARTER IS AS FOLLOWS:

TEMPERATURE RANGE	32.0 ~43.9	90 ~ 111.9
ACCURANCY	0.1	0.2
RESOLUTION	0.1	0.1

4.4 While XR1182D-4

<1> PSW: Push switch to power on or power off.

<2> When power on:



- A. The LCD display 100.0 * (When (T_OPT1=NC) or 100.0 * When (T_OPT1=0) about 2 sec.
- B. After A, show the temperature of the last measured (and "M" When T OPT1=0) about 2 sec.
 - C. After B, Show 37.0 (or98.6) about 1 sec.
- D. After C, when it is measuring. The (or) will flash at the speed of 1 Hz.
 - E. If the temperature 32.0 (90), then display L0 ().
 - F. If the temperature or = 42.0 (108), then display H I ().
 - G. When measuring, the LCD will always display the highest temperature.
 - H. If the measured temperature is not changed more than 16, the measurement is over and mark () stop flashing.
- I. When measurement is over, if the temperature 37.5 (99.5), the buzzer alarms "Bi-Bi Bi-Bi " for 4 sec, as follows:

Bi Bi Bi O.1258 0.1258 0.1258 0.1258 0.3758

If the temperature 37.5 (99.5), the buzzer alarms

Bi 0.5S 0.5S

"Bi-Bi-Bi-Bi-" for 4 sec, as follows:

- J. It will auto power off when measurement is over than 10 minutes.
- L. When measurement is over, if the temperature rises within 10 min, the () mark will flash again (repeat from the step of< 2>-D).
- <3> When push switch, buzzer will alarm "Bi" about 0.125 sec.
- <4> When power off: the stand-by current 0.5 uA.
- <5> The frequence of the buzzer is 5.3khz.
- <6> After <2>-C, if detect low voltage(1.35 0.05 V):

A: When T OPT1=NC:

The battery mark " I " flashes at the speed of 1Hz and the measurement maybe not accurate, means thermometer's battery must be changed.

B: When T OPT1=0:

The LCD display flashes at the speed of 1Hz and the measurement maybe not accurate, means thermometer's battery must be changed.

<7> When TEST2 pin is floating, the LCD displays the highest value, not the real time value, in order to adjust the reference resistance RF during the process of producing. When connected to VDD, the LCD displays the real time value.

<8> / (CLFH Pad) function is used by pad option.

	CONNECTED TO VSS	NO CONNECT
CLFH		

<9> Thermometer's other charter is as follows:

Temperature range	32.0 ~41.9	90 ~ 107.9	
Accuracy	0.1 0.2		
Resolution	0.1	0.1	



5.Pin Descriptions

Pin	Name	I/O	Function
1	SC		Reference and sensor frequency input pad.
		I	The reference & sensor frequency generator consists of pad 1,3,4.
2	RF	o	PMOS open drain, connected to the reference resistance.
3	RS	o	PMOS open drain, connected to the sensor.
4	M_OPTION	I	Listed as tables above.
5	TEST1	I	Test pad, for IC internal test only.
6	OSCI	I	System frequency input pad.
7	OSCO	o	System frequency output pad.
8	BUZ1	0	Output pad, the buffer of buzzer.
9	BUZ2	0	Output pad, the buffer of buzzer.
10~12	COM1~COM3	o	LCD backplane drive, 3-level voltage out
13~15	SA1~SA3	0	LCD segment drive



	_		XXTTOZD
16~18	SB1~SB3		LCD segment drive
		O	
19~21	SC1~SC3		LCD segment drive
		o	
22	SD1	+	LCD gogment duive
22	SDI		LCD segment drive
		0	
23	VA		Doublers voltage 3V capacitor connects.
		O	
24	VB		Doublers voltage 3V capacitor connects.
		o	
25	VLCD	+	The voltage is 3V.
23	VLCD		The voltage is 5 v.
		O	
26	VDD		1.5V
		I	
27			Listed as tables above.
	CF_OPTION	I	
	_		
			Pull-low test pad, for the test of production. When floating, LCD
28	TEST2	I	displays the highest value; When connected to VDD, the LCD displays
20	IESI2	1	the real-time value (not the highest value).
			Pull-low input pad, push switch to power on or power off.
29	PSW		
			WhileXR1182D-1, stable time option function with T_OPT2
		I	While XR1182D-2/-4
			No connect: While detecting low voltage, the battery
30	T_OPT1		mark will blink at the speed of 1Hz;
			Connected to GND: While detecting low voltage, LCD displays will
			blink at the speed of 1Hz.
			WhileXR1182D-3, don't care.




			XIVITOZD				
			While XR1182D-1, stable time option function with T_OPT1.				
		I	T_OF	T1 T_0	OPT2	Stable Time	
31	T_OPT2		Float	ng Flo	ating	16s	
31	1_0F12		GND	Flo	ating	8s	
			Float	ng GN	ND	4s	
			While XR1182D-2 /-3/-4	, don't care.	•		•
			For the low voltage dete	cting.			
32	LOWC	I					
			While XR1182D-1 & XR	1182D-2&X	R1182E	-4, don't care.	
33	SM	I/O	While XR1182D-3,				
33	SIVI	1/0	Connected to VDD: memory function;				
			Connected to VSS: no n	nemory fund	ction.		
			Power supply GND				
34	GND	I					
			While XR1182D-1 and	CF_OPTION	N Floati	ng,	
35	CLFH	I	No connect: show ; Connected to VSS: show .				
33	CLIII		While XR1182D-2/-3/-4				
			No connect: show ; Connected to VSS: show .				
			Listed as tables above.				
36	F_OPTION	I					

F_OPTION	CF_OPTION	M_OPTION	Function
Floating	Don't care	Floating	XR1182D -1
GND	Floating	Floating	XR1182D -2
GND	VDD	Floating	XR1182D -3
GND	Don't care	GND	XR1182D -4

F_OPTION	CF_OPTION			
Floating	Floating	Opts	or	by CLFH
GND	Don't care	Opts	or	by CLFH



6.Pad Diagram

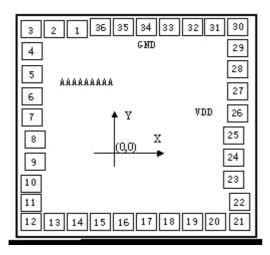

Chip Size: (m *1220 m)

Note: The substrate must be connected to VSS or floating

PAD LOCATION

PROJECT:	XR1182D	TOPCELL:	XR1182D		
NO.	PADNAME	X	Y		
1	SC	-283	510		
2	RF	-395	510		
3	RS	-505	510		
4	CHG	-505	380		
5	TEST1	-505	270		
6	OSCI	-505	160		
7	osco	-505	50		
8	BUZ1	-462	-75		
9	BUZ2	-462	-192		
10	COM1	-505	-309		
11	COM2	-505	-422		
12	СОМЗ	-505	-535		
13	SA1	-376	-535		

DDOCESS	CCMC0 5	DATE	2009/00/04	
PROCESS	CSMC0 5	DATE	2008/09/04	
NO.	PADNAME	X	Y	
19	SC1	284	-535	
20	SC2	395	-535	
21	SC3	505	-535	
22	SD1	505	-410	
23	VA	484	-257	
24	VB	488	-130	
25	VLCD	488	-20	
26	VDD	505	95	
27	CF_OPTION	505	205	
28	TEST2	505	315	
29	PSW	505	425	
30	T_OPT1	505	535	
31	T_OPT2	380	535	




Y	R 1	1	8	2	D
Λ	lacksquare		O.		U

14	SA2	-266	-535
15	SA3	-156	-535
16	SB1	-46	-535
17	SB2	65	-535
18	SB3	175	-535

		 	
32	LOWC	270	535
33	SM	160	535
34	GND	50	535
35	CLFH	-60	535
36	F_OPTION	-170	535

7. Application Circuit

- 7.1 Application 1(XR1182D-1)
- 1). Option or measurement by bonding option CLFH(bond to GND & floating)

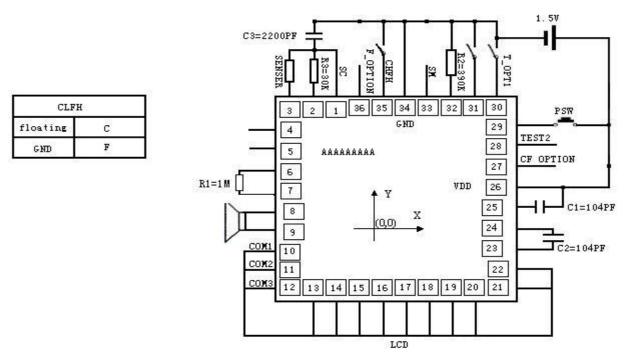


Note: The value of R1, R2, C1 C2 is allowed the tolerance of $\pm 5\%$.

The value of ,which is allowed the tolerance E of $\pm 1\%$. The RS is Sensor (503ET).



7.2 Application 2(XR1182D-2)

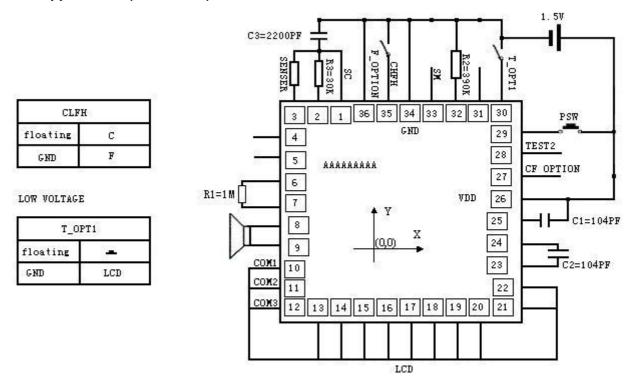


Note: The value of R1, R2, C1 C2 is allowed the tolerance of $\pm 5\%$.

The value of

,which is allowed the tolerance E of $\pm 1\%$.

The RS is Sensor (503ET).

7.3 Application 2(XR1182D-3)

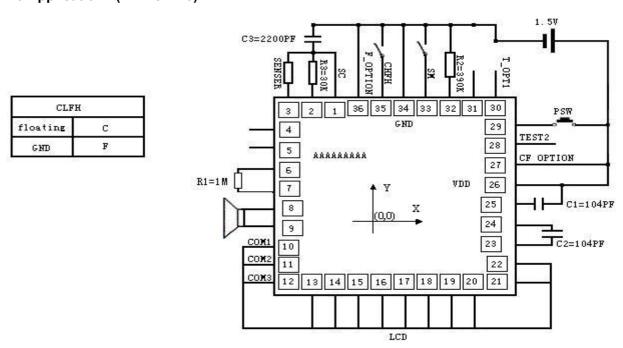

Note: The value of R1, R2, C1 C2 is allowed the tolerance of ±5%.




The value of

,which is allowed the tolerance E of $\pm 1\%$.

The RS is Sensor (503ET).

7.4 Application 2(XR1182D-4)

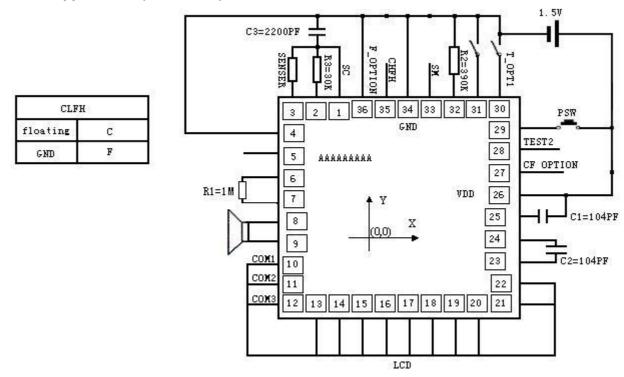


Note: The value of R1, R2, C1 C2 is allowed the tolerance of $\pm 5\%$.

The value of RF=30k , which is allowed the tolerance E of $\pm 1\%$.

The RS is Sensor (503ET).

8.LCD Electrode Pattern

8.1 XR1182D-2/- T_OPT1 Pad: no connect (LCD-1)

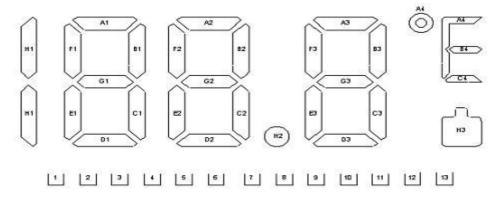

LCD SPEC:




A. 1/3 DUTY, 1/2 BIAS. (LCD USES 3V)

B. VTN=1.5V

	1	2	3	4	5	6	7	8	9	10	11	12	13
COM1	COM1			F1	A1	B1	F2	A2	B2	F3	A3	В3	A4
COM2		COM2		E1	G1	C1	E2	G2	C2	E3	G3	C3	B4
COM3			COM3	H1	D1			D2	H2	13	D3	Н3	C4

8.2 XR1182D -2/-4, T_OPT1 Pad: connected to VSS (LCD-2)

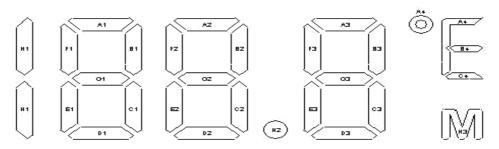




LCD SPEC:


A. 1/3 DUTY, 1/2 BIAS. (LCD USES 3V)

B. VTN=1.5V

	1	2	3	4	5	6	7	8	9	10	11	12	13
COM1	COM1			F1	A1	B1	F2	A2	B2	F3	A3	В3	A4
COM2		COM2		E1	G1	C1	E2	G2	C2	E3	G3	C3	B4
COM3			COM3	H1	D1			D2	H2	13	D3	Н3	C4

8.3 XR1182D-1/-3

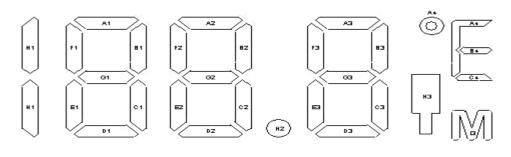



LCD SPEC:

- A. 1/3 DUTY, 1/2 BIAS. (LCD USES 3V)
- B. VTN=1.5V



	-	-									<u> </u>	<u> </u>	
	1	2	3	4	5	6	7	8	9	10	11	12	13
COM1	COM1			F1	A1	B1	F2	A2	B2	F3	A3	В3	A4
COM2		COM2		E1	G1	C1	E2	G2	C2	E3	G3	C3	B4
COM3			COM3	H1	D1			D2	H2	13	D3	Н3	C4

9. Absolute Maximum Ratings

(All voltage referenced to GND)

Item	Symbol	Rating	Unit
Supply Voltage	VDD	0~1.65	V
Input / Output Voltage	VI/VO	GND-0.3 ~ VDD+0.3	V
Operating Temperature	TDD	0 ~	
Storage Temperature	TST	-55 ~ +125	

Note: These are stress ratings only. Stresses exceeding the range specified under "Absolute Maximum Ratings" may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliability.

10.Electrical Characteristic

(All voltage referenced to GND, Ambient temperature=25 , VDD=1.5V)

Parameters	Symbol	Condition	Min.	Тур.	Max.	Unit
Operating Voltage	VDD		1.3	1.5	1.65	V
Operating Average Current	IDD	VDD=1.5V unload		45	60	μA
Stand-by Current	ISTB	VDD=1.65V	0		0.5	μA
Oscillation Frequency	FOSC	ROSC=1M	31	33	35	KHz
	VIL		VSS-0.3 V			V
Input Voltage	VIH				VDD+0.3 V	V
Output Voltage	VOL		VSS-0.1 V			V



	_		_ / \ \ \ .	<u> </u>	
	VOH			VDD+0.1	V
				V	
Buzzer Driving Current	IDRIV	VDD=1.5V		4.5	mA
	E				
Buzzer Sinking Current	ISINK	VDD=1.5V		10	mA

11.Editions

Editions	Expression	Date	
V1.0	New Edition	2008-11-17	
V1.01	Delete the function: Can switch / by the key-press.	2009-12-16	

12.Notices

- 1. The information contained herein could be changed without notice owing to product and /or technical improvements. Please make sure before using the product that the information you are referring to is up-to-date.
- 2.No responsibility is assumed by us for any consequence resulting from any wrong or improper operation, etc.of the product.